To repair or replace the bearings of the pivot points of Genius LT we offer following articles:


| 219553-222 | Tool set swingarm Genius LT 2011 1size |
|------------|--|
| 219565-223 | Swingarm-Rep. Kit Genius LT Nsize |


The tool set will contain, beside all tools in stainless steel quality, a CD showing all steps of the bearing disassembly and assembly as well as all needed technical data as e.g. tightening torques etc.




The Swingarm Rep Set will contain beside the bearings all nuts and bolts to replace all moving parts or parts of wear and tear of a Voltage FR bike.


Pls have a look at following pics giving you an overview about all needed steps and please make sure to use Loctite BLUE (still removable) on all screws:

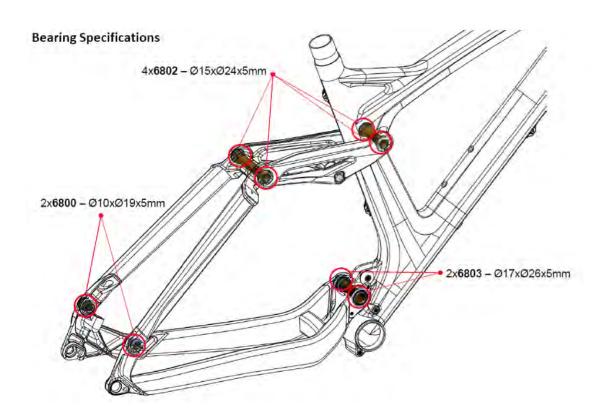


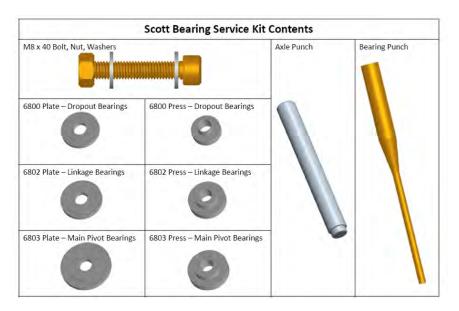


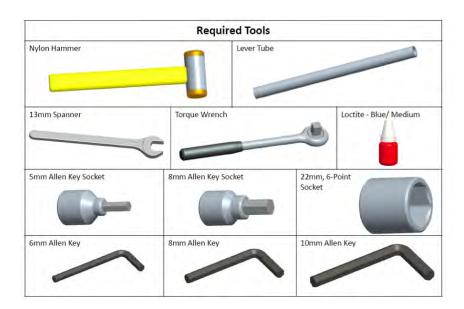



Dropout Pivot Disassemble

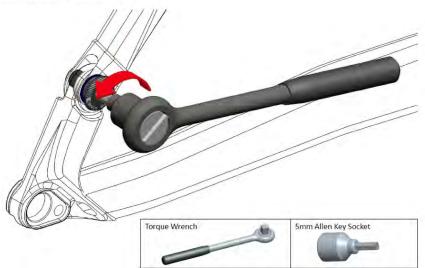


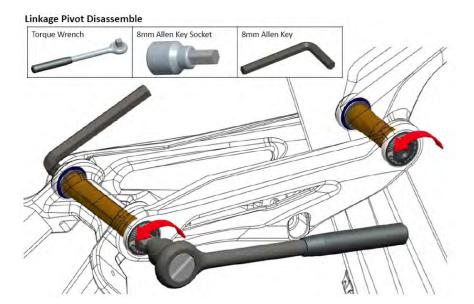


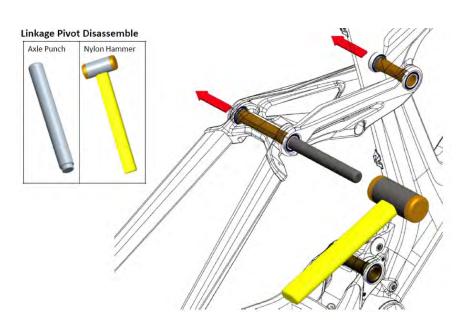


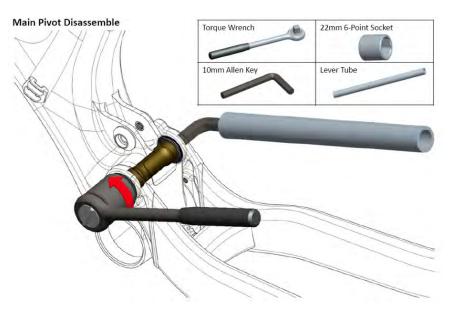


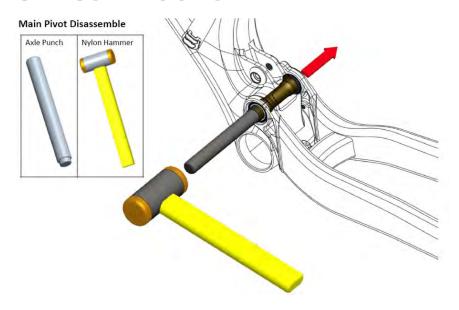


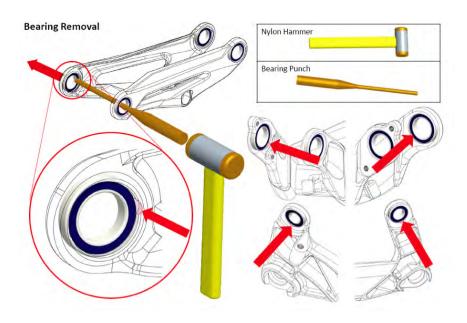


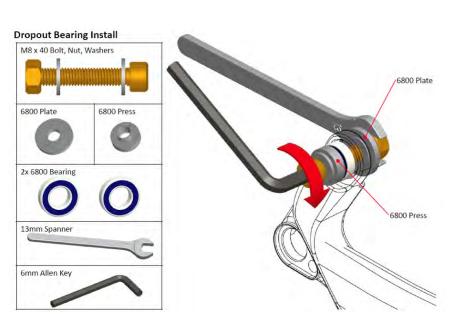


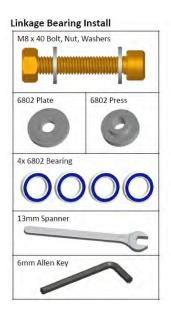

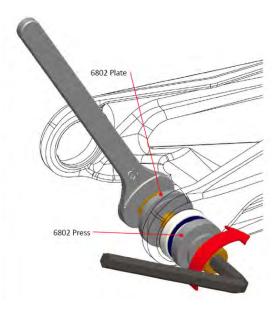


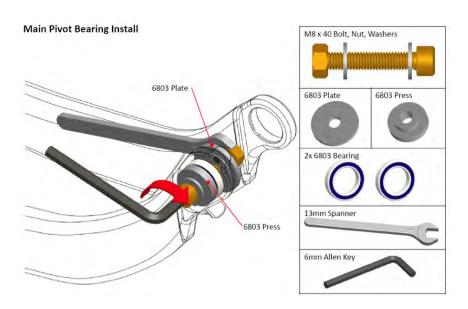


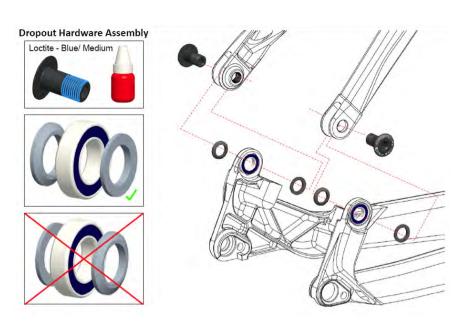

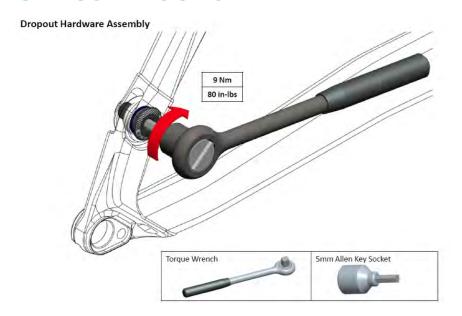


Linkage Axle Pre-Assembly

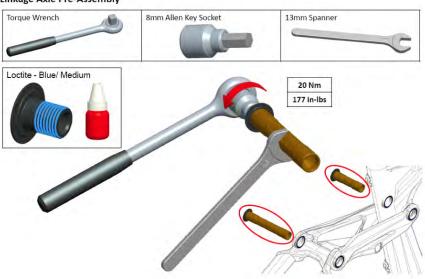


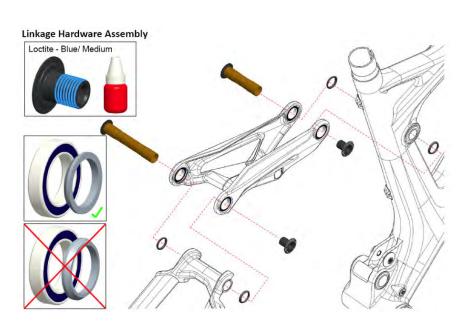


Linkage Hardware Assembly

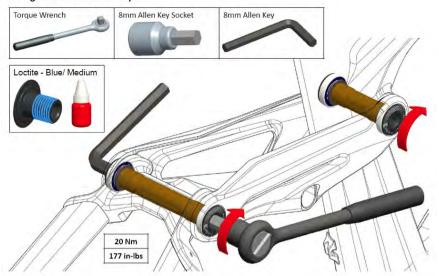

Main Pivot Hardware Assembly

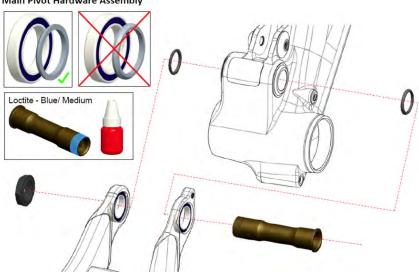

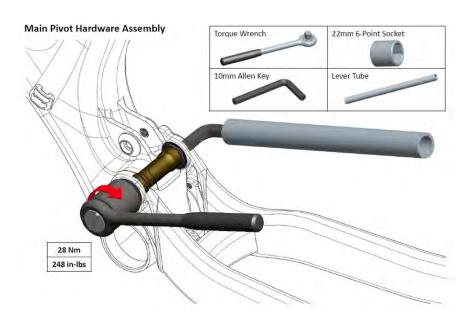

The bearings are standard size and can also be ordered in local hardware stores, in case customers do not want to replace all parts.

One frame needs following bearings:

- 4 x 6802 (15x24x5mm)
- 2 x 6803 (17x26x5mm)
- 2 x 61800 (10x19x5mm)

5