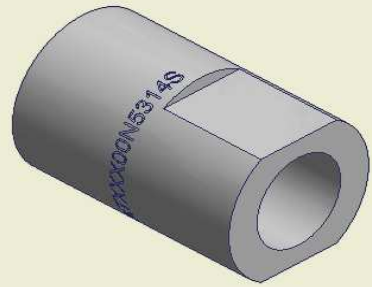 
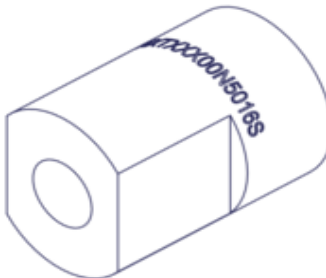 
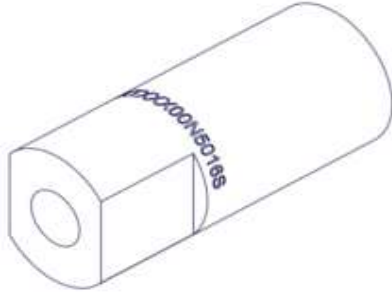 
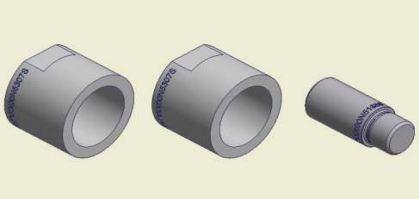 
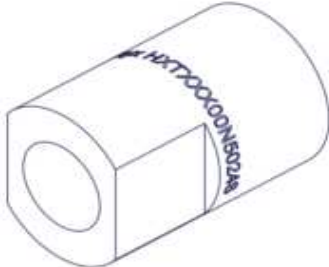 


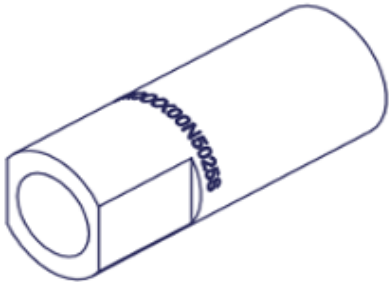 
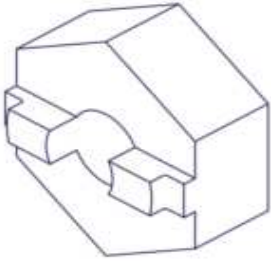 
Hub Tools (all Levels)

Article number	Description	Used for	Picture	Need
HXTXXX00N5001S	PARK TOOL AXLE HOLDER	Universal (part of toolbox)		1
HXTXXX00N5314S	SHORT INSTALLATION CYLINDER Ø15/26x40MM	Hubs mit Ø15/26 bearings (19P/18C)		2
HXTXXX00N5015S	NYLON HAMMER	Universal (part of toolbox)		1
HXTXXX00N5016S	SHORT INSTALLATION TOOL Ø10/26X35MM	Hügi 98 / TD / 340 / 540 / Onyx (part of toolbox)		1

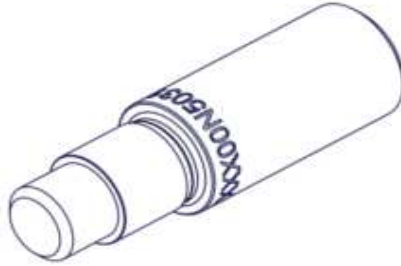 
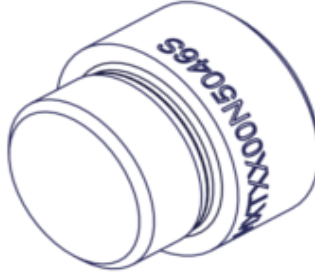 
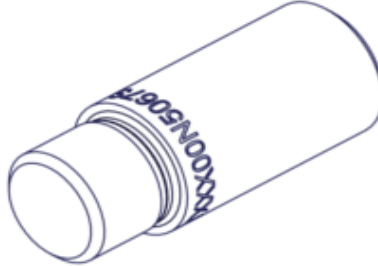 
Hub Tools (all Levels)

Article number	Description	Used for	Picture	Need
HXTXXX00N5017S	LONG INSTALLATION CYLINDER 60MM	Hügi 98 / TD / 340 /540 / Onyx (part of toolbox)		1
HWTXXX00NTKPSS	TOOL KIT SET FRONT WHEEL SA15 PS	Predictive Steering Hubs		1
HXTXXX00N5023S	FW INSTALLATION CYLINDER ONYX	Onyx (part of toolbox)		2
HXTXXX00N5024S	SHORT INSTALLATION TOOL Ø15/28X35MM	180 / 190 / 240 / 350 / 440 (part of toolbox)		2

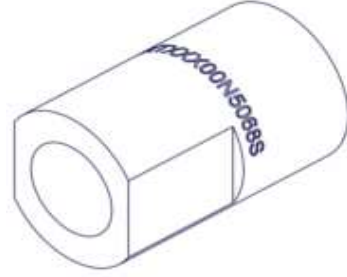 
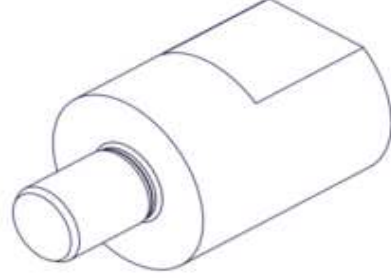 
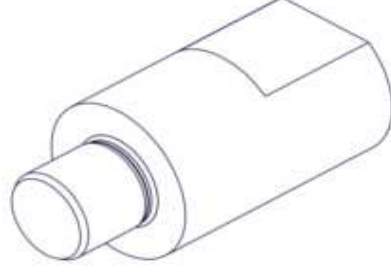 
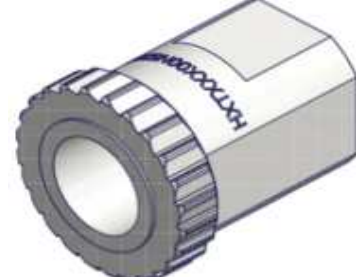 
Hub Tools (all Levels)

Article number	Description	Used for	Picture	Need
HXTXXX00N5025S	LONG INSTALLATION TOOL Ø15/24X60MM	Hubs with ratchet system, part of toolbox		1
HXTXXX00N5026S	INSTALLATION TOOL FOR HUB SEAL	Hubs with ratchet system (part of toolbox)		1
HXTXXX00N5027S	ASSEMBLY / DISASSEMBLY TOOL FOR RING NUT	Hubs with ratchet system (part of toolbox)		1
HXTXXX00N5030S	WRENCH FOR BEARING SHELL	370/Onyx/Cerit (part of toolbox)		1

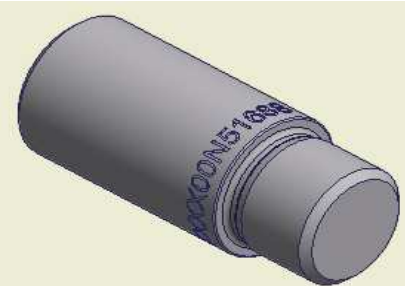 
Hub Tools (all Levels)

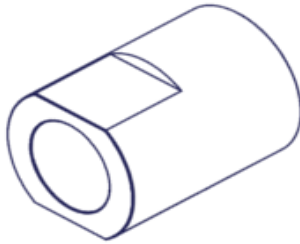 
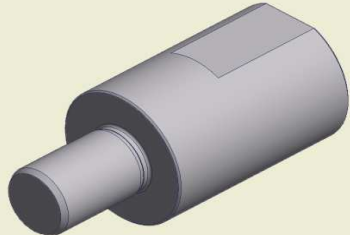 
Article number	Description	Used for	Picture	Need
HXTXXX00N5031S	DISASSEMBLY TOOL FOR AXLE WITH Ø15MM	180 / 190 / 240 / 350 / 440 (part of toolbox)		1
HXTXXX00N5038S	INSTALLATION TOOL FOR BALL BEARING FR	240s OS/440/FR (part of HWTXXX00NTKFRS and part of toolbox)		2
HXTXXX00N5046S	DISASSEMBLY TOOL FOR AXLE FW	240s OS/440/FR (part of HWTXXX00NTKFRS and part of toolbox)		1
HXTXXX00N5067S	FW DISASSEMBLY TOOL FOR AXLE Ø17MM	190/240 radial & Straight Pull (part of HWTXXX00NTKRAS and part of toolbox)		1

Hub Tools (all Levels)

Article number	Description	Used for	Picture	Need
HXTXXX00N5068S	FW INSTALLATION CYLINDER (RADIAL)	190/240 radial & Straight Pull (part of HWTXXX00NTKRAS and part of toolbox)		2
HXTXXX00N5069S	RW INSTALLATION CYLINDER	240 Straight Pull (part of HWTXXX00NTKSPS and part of toolbox)		1
HXTXXX00N5070S	FW INSTALLATION CYLINDER	240 Straight Pull (part of HWTXXX00NTKSPS and part of toolbox)		2
HXTXXX00N5266S	ASSEMBLY / DISASSEMBLY TOOL FOR RING NUT 3P	Hubs with 3 pawl system (part of toolbox)		1

Hub Tools (all Levels)

Article number	Description	Used for	Picture	Need
HWTXXX00N5290S	TOOL KIT SET FOR FW 350/370 SA15	Hubs with pressed in 15mm endcaps (part of toolbox)		1
HWTXXX00N5292S	TOOL KIT SET FOR FW 350/370 SA20	Hubs with pressed in 20mm endcaps (part of toolbox)		1
HXTXXX00N5139S	DISASSEMBLY HUBS	Universal (part of toolbox)		1
HXTXXX00N5168S	DISASSEMBLY TOOL FOR AXLE WITH ø18	240s Fifteen (part of HWTXXX00NTK15S and part of toolbox)		1

Article number	Description	Used for	Picture	Need
HXTXXX00N5167S	SHORT DISASSEMBLY CYLINDER Ø18/30x40MM	240s Fifteen (part of HWTXXX00NTK15S and part of toolbox)		2
HXTXXX00N5249S	INSTALLATION ZYLINDER Ø12/24X53MM	Dicut Frontwheel		2
HXTXXX00N9842S	INSTALLATION ZYLINDER (Nondriveside)	180 Mon Chasseral Rearwheel		1