


SCOTT BIKE SHOES

34

SCOTT BIKE SHOES


SHOE REPLACEMENT PARTS

BUCKLE REPLACEMENT KIT FOR SHOES FROM 2000 - 2006

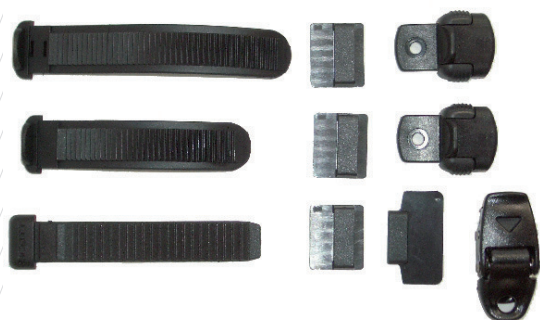


BUCKLE KIT
15.1200.051.0.000

BUCKLE REPLACEMENT KIT FOR SHOES FROM 2007

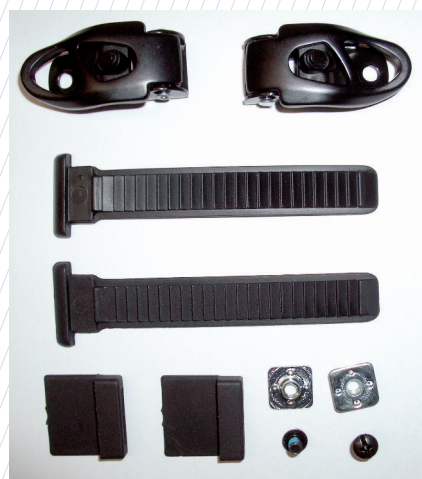

BUCKLE KIT BLACK
2104850001

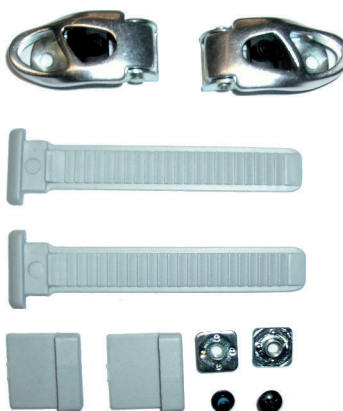

BUCKLE KIT silver
2104850012

PUMA DISC SYSTEM REPLACEMENT PARTS



DISC S (38-40)
15.1200.350.0.030



DISC L (41-46)
15.1200.350.0.050

SCOTT BIKE SHOES

SHOE REPLACEMENT PARTS

BOA LACE SYSTEM REPLACEMENT PARTS MODEL B REEL AND LACE REPLACEMENT KITS FOR SHOES 2005-2006



REEL / LACE KIT
15.5.200.598.0.000



LACE KIT
15.5.200.599.0.000

Changing instruction

http://www.boatechnology.com/downloads/modelB_reel_2006.pdf

|| LACE/REEL CHANGING INSTRUCTIONS:

IMPORTANT: Change one shoelace at a time and use the other shoe as a guide.

- Remove the screw, knob and spring using the Boa tool.
- Pull spool out, cut off knots and remove old lace.
- Using SHARP scissors, cut a new lace the same length as the old.

NOTE: Some new laces may not require cutting. For a complete list of lengths, go to www.boatechnology.com
- Insert lace into holes and out through center of housing.

Replace the lace exactly as it was before.
- Insert lace into bottom holes of spool. (Use new spool if you are installing a new reel).

IMPORTANT: Once the knot is seated, trim lace flush with top of the spool.
- Pull on laces to tighten knots and seat spool into housing.

IMPORTANT: Tuck lace ends into the spool using Boa tool.
- Reinstall spring, knob and screw. Use new parts if installing a new reel.

NOTE: Rotate the knob a few times to ensure alignment. Then tighten the screw FIRMLY.

SCOTT BIKE SHOES

SHOE REPLACEMENT PARTS

BOA LACE SYSTEM REPLACEMENT PARTS MODEL LSR REEL AND LACE REPLACEMENT KITS FOR SHOES FROM 2007



REEL / LACE KIT
210473




LACE KIT
210474

Changing instruction

http://www.boatechnology.com/downloads/LSR_reel_2006_instructions3.pdf

> see next page

STUD REPLACEMENT KIT

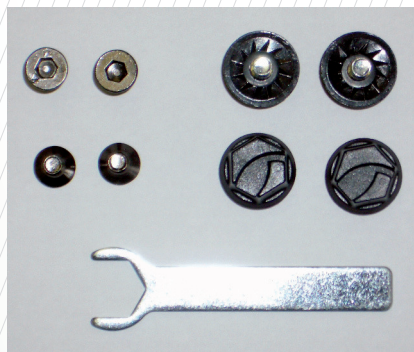

STUD KIT
15.1200.231.0.000

SCOTT BIKE SHOES

SHOE REPLACEMENT PARTS


Changing instruction

http://www.boatechnology.com/downloads/LSR_reel_2006_instructions3.pdf


III LACE/REEL CHANGING INSTRUCTIONS:

IMPORTANT: Change one shoelace at a time and use the other shoe as a guide.

- 1** Remove the screw and knob, using the Boa tool.

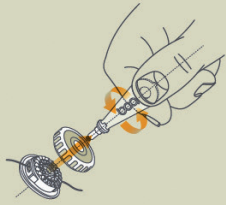

- 2** Pull spool out, undo the Labyrinth knot and remove old lace.

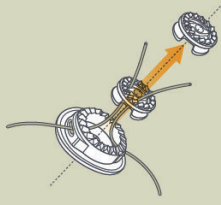

- 3** Using SHARP scissors, cut a new lace the same length as the old one.


NOTE: For a complete list of lengths, go to www.boatechnology.com




- 4** Replace the lace through the lace guides exactly as it was before. Thread new lace ends through housing as shown.




- 5** Insert lace ends into bottom holes of spool, then follow the Labyrinth knot instructions.

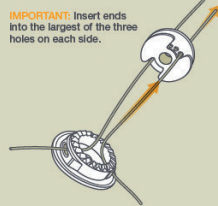


- 6** **LABYRINTH KNOT**
Loop lace and feed back through second hole.

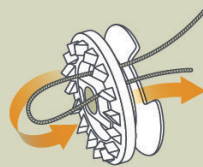


- 7** **LABYRINTH KNOT**
Loop again and feed through final hole.

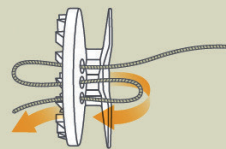

- 8** **LABYRINTH KNOT**
Pull upper loop to take up slack in bottom loop, leaving lace end length of 0.75 cm.

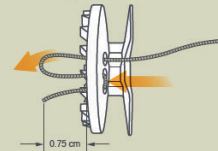

- 9** **LABYRINTH KNOT**
Twist top loop clockwise 1/4 of a turn and insert end of lace through loop.

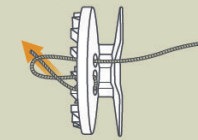

- 10** **LABYRINTH KNOT**
Then pull loop tight to trap the lace end. Check to make sure the lace is tied correctly.

CORRECT WAY:
Lace end contained within recessed portion of spool.



INCORRECT WAY:
Lace end passed through loop from wrong side and lace end extending into gear teeth.



- 11** **LABYRINTH KNOT**
Repeat Labyrinth knot for second lace cord end. (Completed knots shown.)




- 12** After the Labyrinth knot is completed, install spool back into housing by pulling on laces to seat spool into housing.



- 13** Reinstall screw and knob, using the Boa tool.

NOTE: Rotate the Reel a few times to ensure proper alignment, then tighten screw firmly.

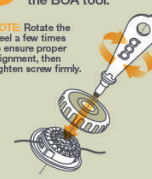

III BOATECHNOLOGY.COM

SCOTT BIKE SHOES

SHOE REPLACEMENT PARTS MY 2010

217221 Heel Lug for Road Outsoles, all colors




217222 Team Issue strap and EVA pad, white/yellow




217223 EVA pad, yellow



217224 Buckle, all colors

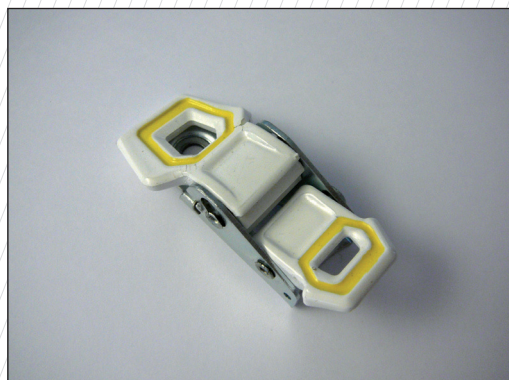

217225 Innersole insert and wedge

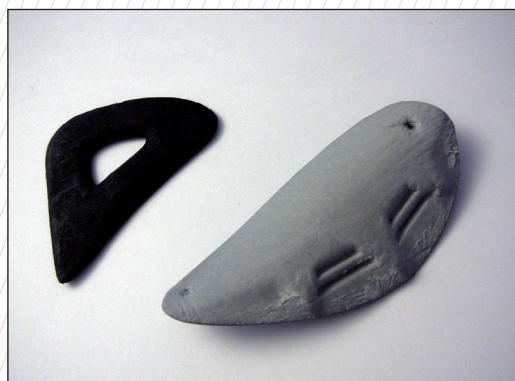

217226 Strap for Team shoes, black and white

